

What is BlockLock?

BlockLock is a very easy and convenient system that enables one to build glass block walls. The system is based on special PVC installation sections, which are fitted between glass blocks and joined with special glue. BlockLock is a comprehensive solution that facilitates the joining of many types of glass blocks.

Save time and money!

How often have you thought of building a glass block wall, but decided not to because of the complication? Or maybe employing professional installers would be expensive? Now it is simple. BlockLock is so easy to use that anyone can become a pro. Now you can build the glass block wall of your dreams. Quickly, easily, with no additional cost. BlockLock building is quick and requires no special abilities. You will like it!

Convenient installation kits

BlockLock is available in convenient and easily transportable installation kits. Each kit contains the exact number of installation sections, chosen to match walls of various sizes as well as the necessary amount of glue. You only need to calculate how many glass blocks you need to build your wall and choose the kit that suits you! There are many options to choose from. Different kits may also be freely combined and modified.



EASY TO BUY
EASY TO INSTALL



**BLOCK
LOCK**
ORIGINAL

www.blocklock.se

BlockLock system is manufactured by VetroPro Group AB.
Adress: Kvistvägen 2, 43358 Partille, Sweden

Building a glass block wall by yourself, is not difficult!



1 Check that there is a 90° angle between the floor and the wall.



2 Apply Block Lock glue in the middle on a floor profile and a wall profile. Attach these to the floor and to the wall, and then apply Block Lock glue on the upper side of the floor profile and 20 cm up on the wall profile.




3 Place the first glass block.



4 Apply Block Lock glue on a vertical 18 cm profile on both sides




5 Place the vertical profile on the glass block. Repeat steps 4, 3 and 5.

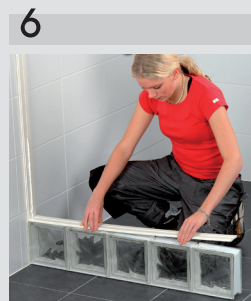

6 Apply Block Lock glue on a horizontal profile and place it over the first layer of glass blocks.



7 Continue with the next layer. Assemble 5-6 layers and leave them to dry. Continue with assembly after 24 hours.

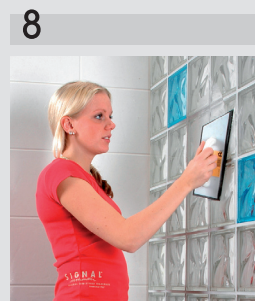

8 After the wall has dried for approximately another 24 hours, grout the joints with Block Lock glass block grout in any colour of your choice.



9 Now your wall is finished. If you didn't choose end blocks to end your wall, you can finish the wall with U-profiles or glass plates.

Installation kits for 19x19 cm glassblocks

Connection possibilities



ORIGINAL 10 5 mm joint



ORIGINAL 20 5 mm joint








ORIGINAL 30 5 mm joint



ORIGINAL 40 5 mm joint



ORIGINAL 50 5 mm joint

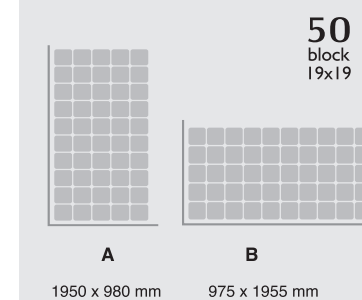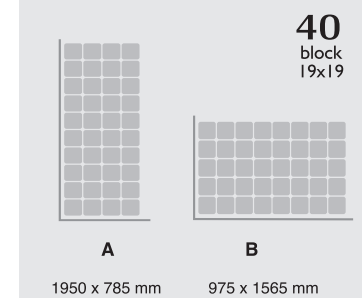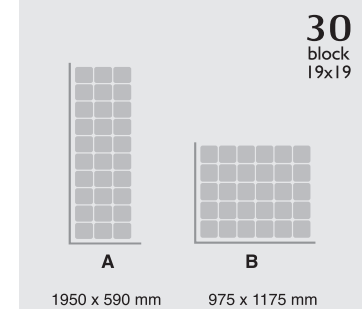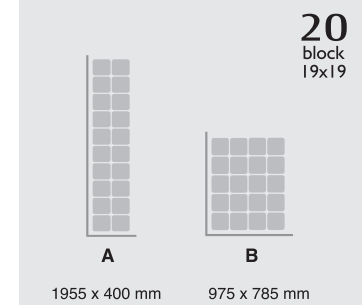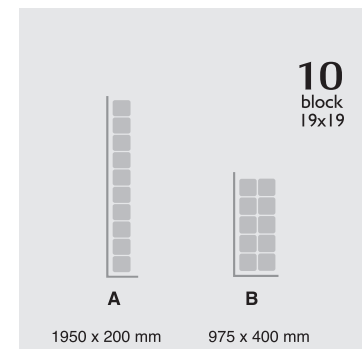

BlockLock provides unlimited application possibilities



Using screws fitted in sections in between glass walls, additional components such as coat hangers, shelves or shower cabin doors are easily attached. The BlockLock system also provides for building walls containing special rounded edging blocks.